




N-waarde	Huisnummer	Eindweerstand
1	30	
2	31	
3	32	
4	33	
5	34	
6	35	
7	36	
8	37	X
9	38	X
10	39	
11	40	
12	41	
13	42	
14	43	
15	44	
16	45	
17	46	
18	47	
19	48	
20	49	
21	50	
22	51	X
23	52	X
24	53	
25	54	
26	88	
27	89	
28	90	
29	91	
30	92	
31	93	
32	94	
33	95	
34	96	
35	97	

N-waarde	Huisnummer	Eindweerstand
36	98	
37	99	
38	100	X
39	101	X
40	102	
41	103	
42	104	
43	105	
44	106	
45	107	
46	108	
47	109	
48	110	
49	111	X
50	112	X
51	113	
52	114	
53	115	
54	116	
55	117	
56	118	
57	119	
58	120	
59	121	
60	122	
61	123	
62	124	
63	125	
64	126	
65	127	
66	128	
67	129	
68	130	
69	131	
70	132	

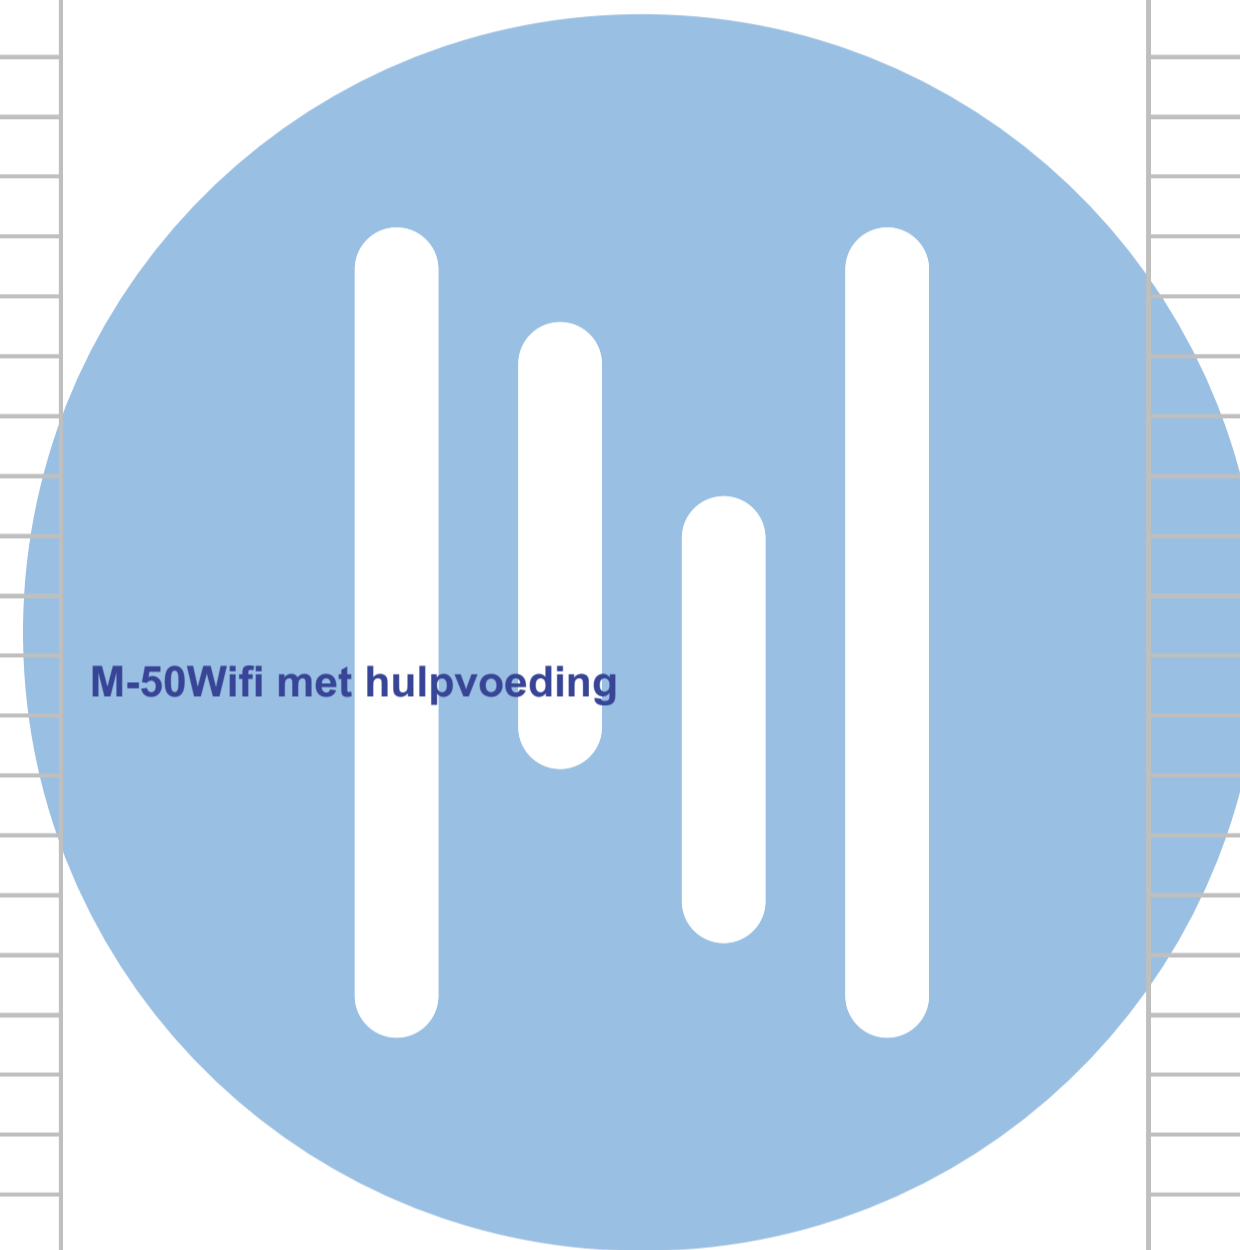

M-50Wifi met hulpvoeding

M-50Wifi met hulpvoeding

nelec  
INTERCOM MADE EASY