



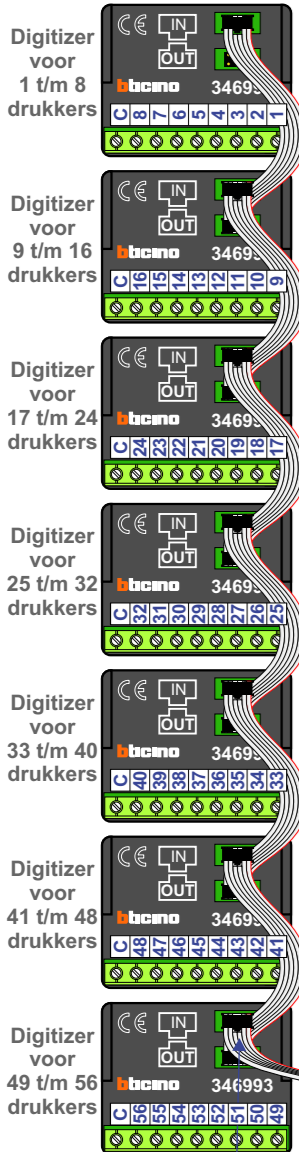

Haal de spanning van het systeem als je een digitizer monteert of demonteert

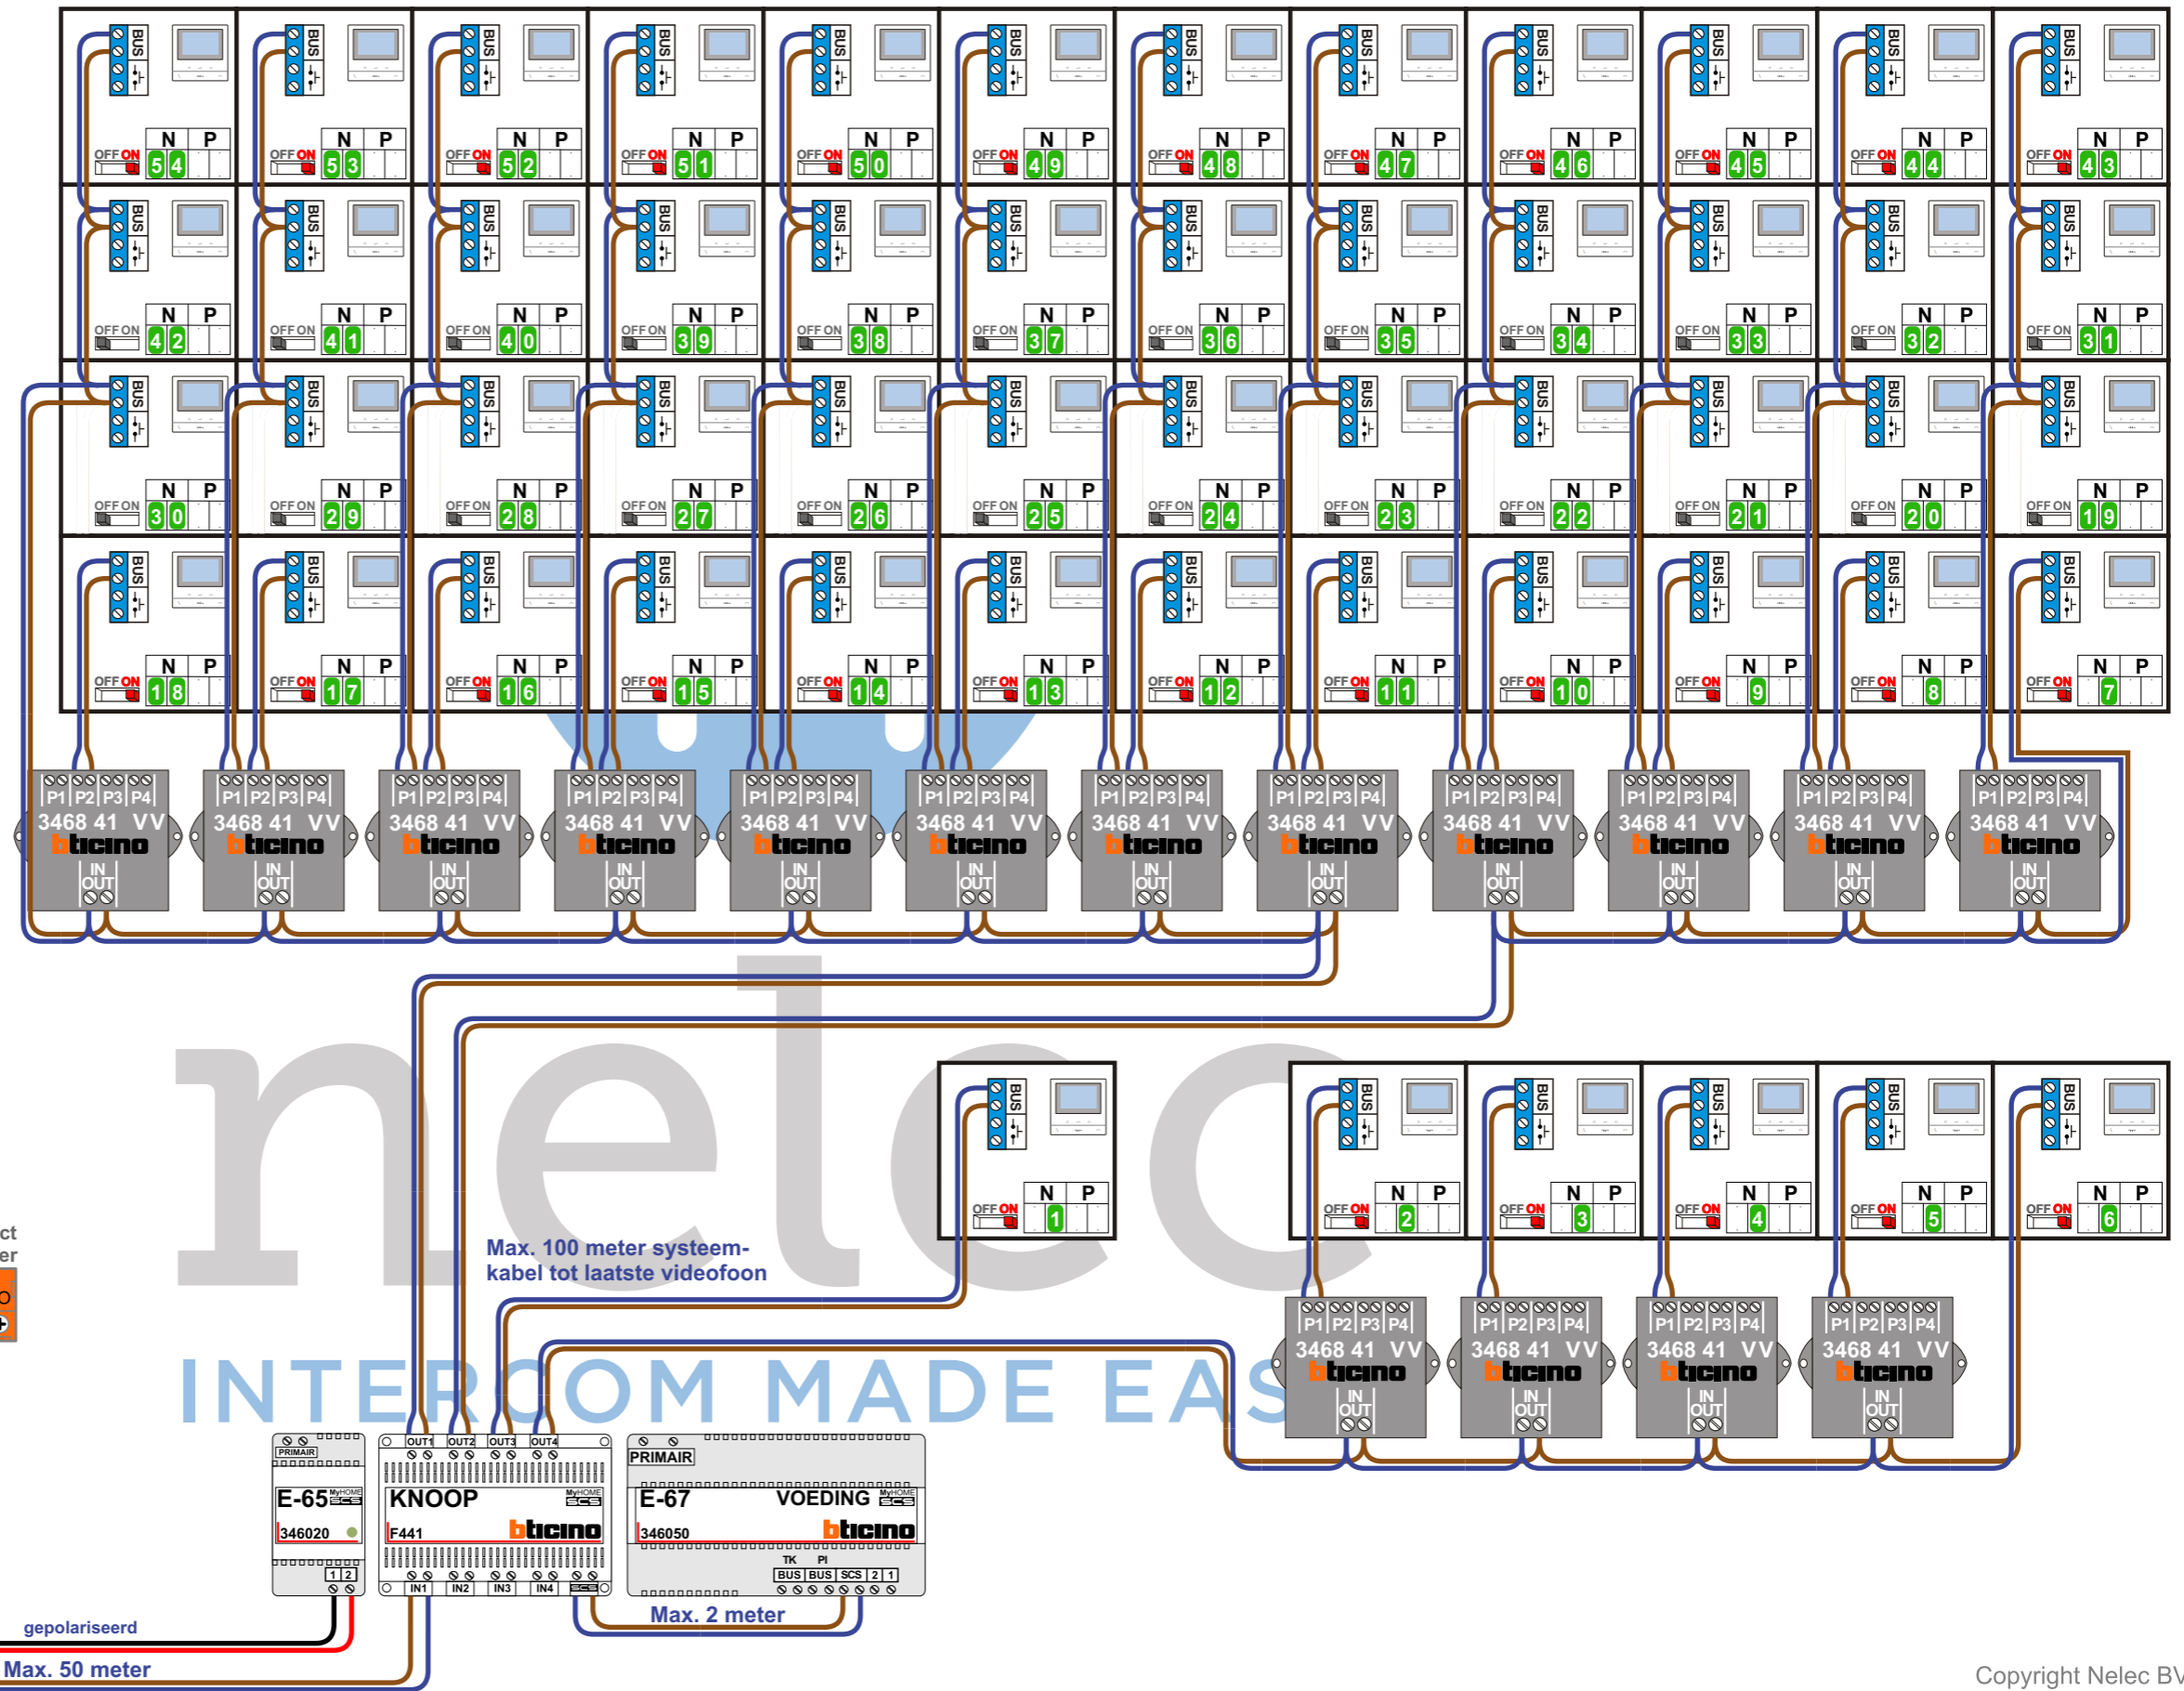

nokjes connectoren wijzen naar elkaar



N-Waarde	Huisnummer	Switch-ON	N-Waarde	Huisnummer	Switch-ON
1	0 Preahep	X	28	20a	
2	8a	X	29	20b	
3	8b	X	30	20c	
4	8c	X	31	22	
5	8d	X	32	22a	
6	8e	X	33	22b	
7	10	X	34	22c	
8	10a	X	35	24	
9	10b	X	36	24a	
10	10c	X	37	24b	
11	12	X	38	24c	
12	12a	X	39	26	
13	12b	X	40	26a	
14	12c	X	41	26b	
15	14	X	42	26c	
16	14a	X	43	28	X
17	14b	X	44	28a	X
18	14c	X	45	28b	X
19	16		46	28c	X
20	16a		47	30	X
21	16b		48	30a	X
22	16c		49	30b	X
23	18		50	30c	X
24	18a		51	32	X
25	18b		52	32a	X
26	18c		53	32b	X
27	20		54	32c	X



nelec
INTERCOM MADE EASY