

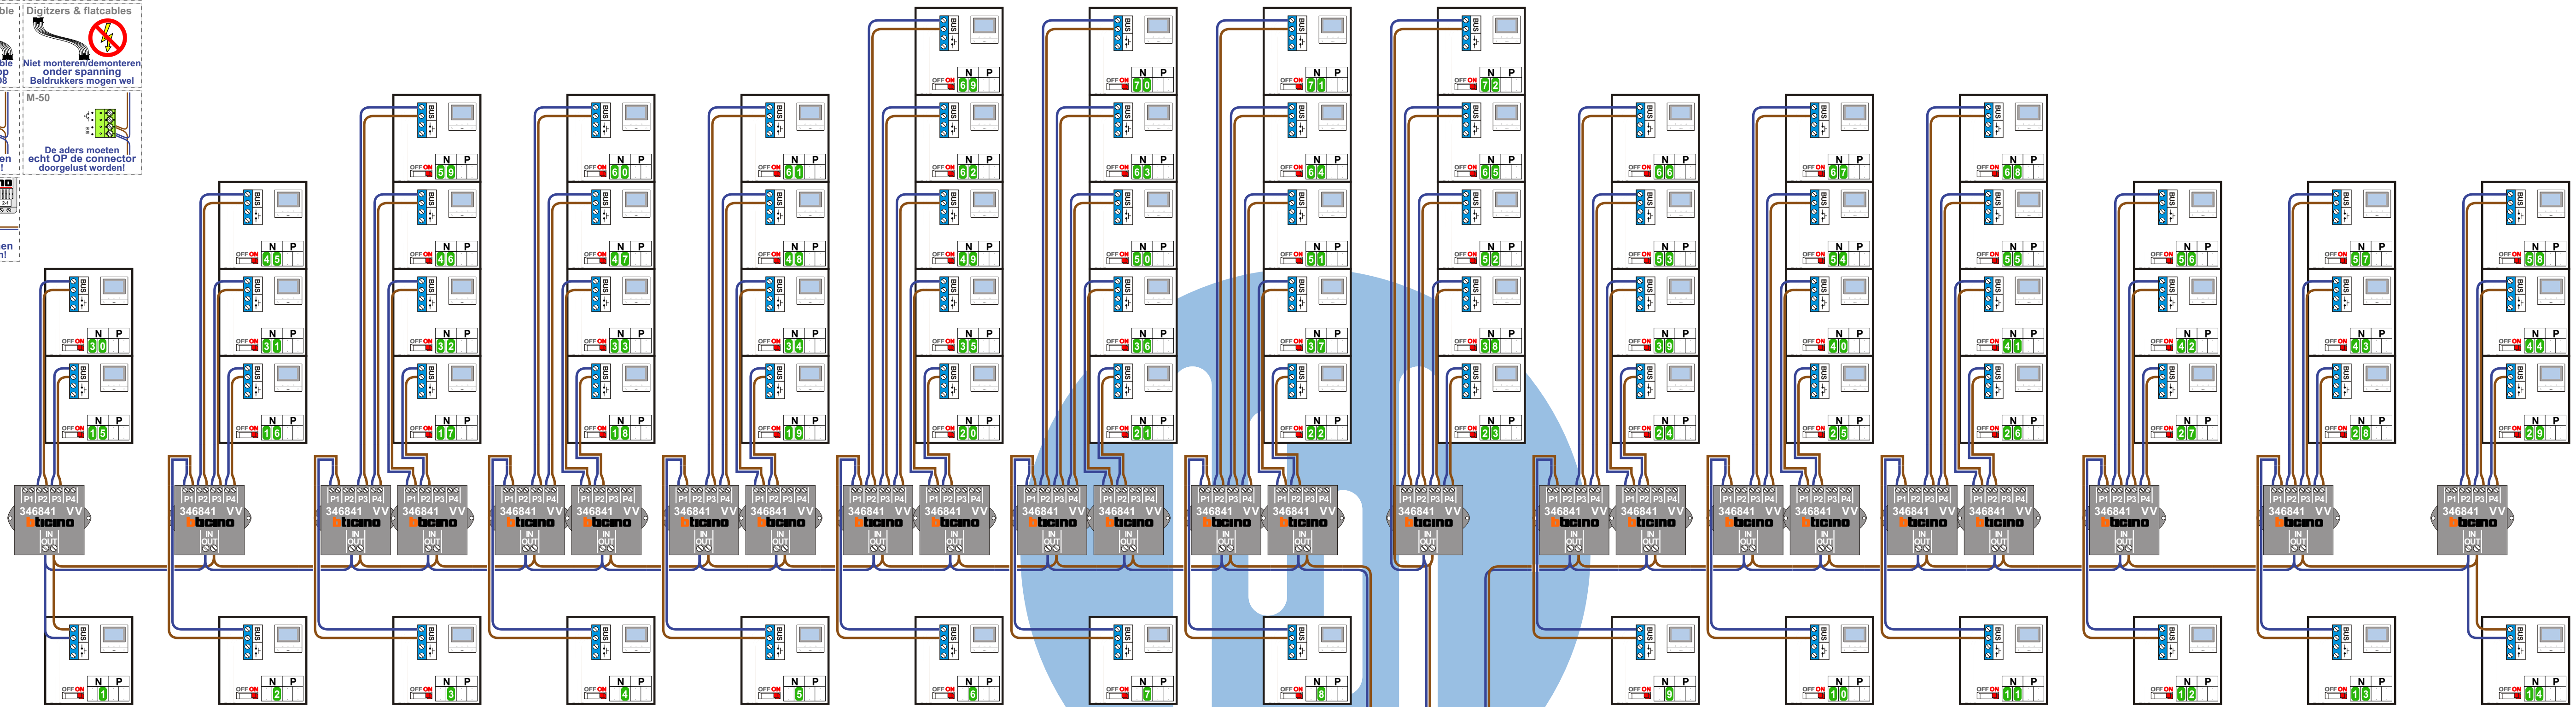


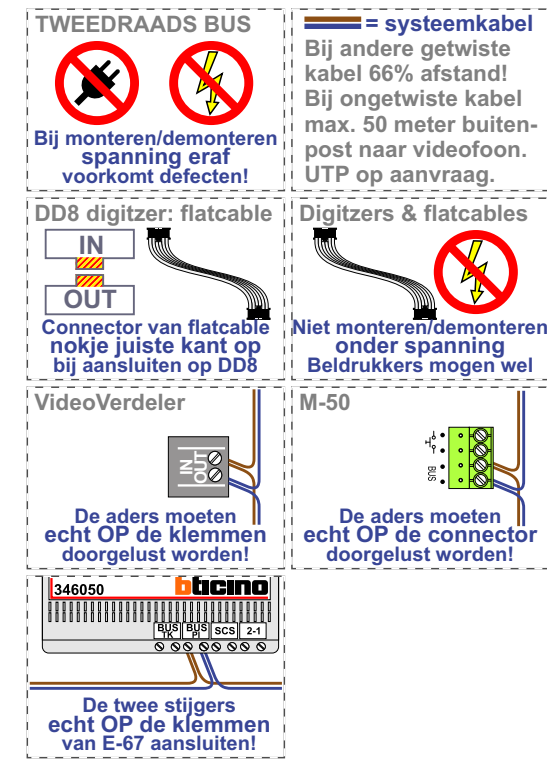

Haal de spanning van het systeem als je een digitizer monteert of demonteert!

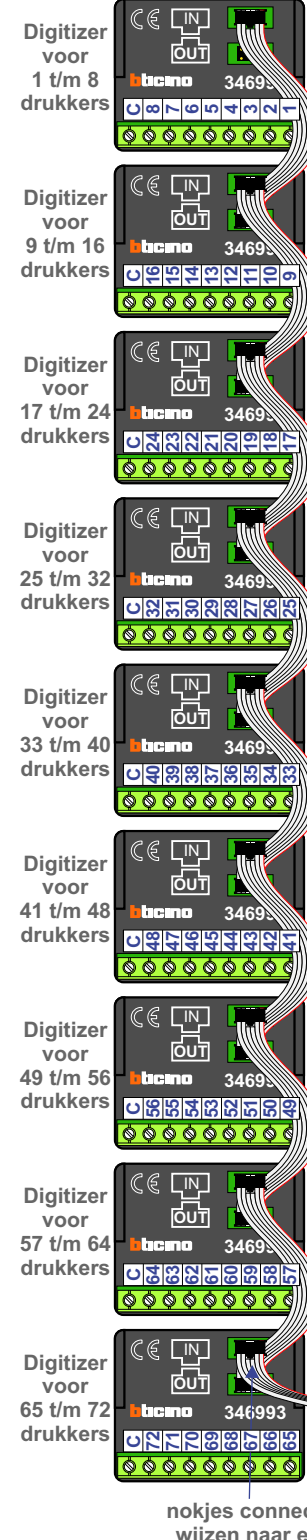

N-Waarde	Huisnummer	Switch-ON
1	1	X
2	2	X
3	3	X
4	4	X
5	5	X
6	6	X
7	7	X
8	8	X
9	9	X
10	10	X
11	11	X
12	12	X
13	13	X
14	14	X
15	15	X
16	16	X
17	17	X
18	18	X
19	19	X
20	20	X
21	21	X
22	22	X
23	23	X
24	24	X
25	25	X
26	26	X
27	27	X
28	28	X
29	29	X
30	30	X
31	31	X
32	32	X
33	33	X
34	34	X
35	35	X
36	36	X

N-Waarde	Huisnummer	Switch-ON
37	37	X
38	38	X
39	39	X
40	40	X
41	41	X
42	42	X
43	43	X
44	44	X
45	45	X
46	46	X
47	47	X
48	48	X
49	49	X
50	50	X
51	51	X
52	52	X
53	53	X
54	54	X
55	55	X
56	56	X
57	57	X
58	58	X
59	59	X
60	60	X
61	61	X
62	62	X
63	63	X
64	64	X
65	65	X
66	66	X
67	67	X
68	68	X
69	69	X
70	70	X
71	71	X
72	72	X