


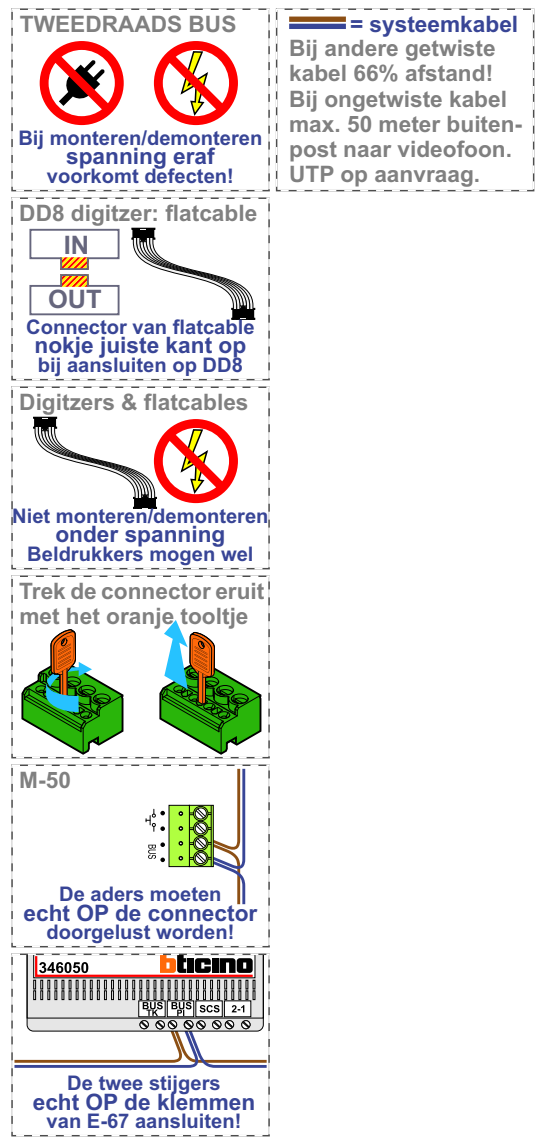


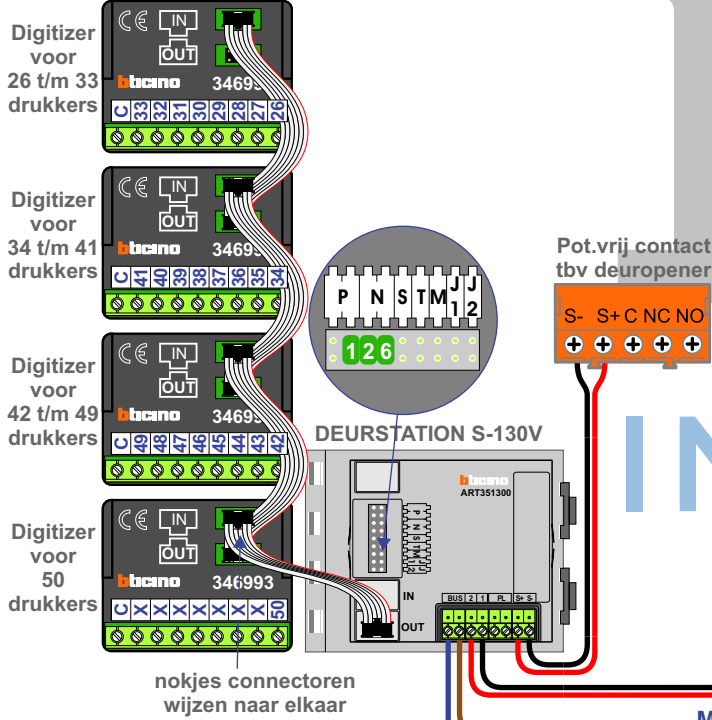

Haal de spanning van het systeem als je een digitizer monteert of demonteert

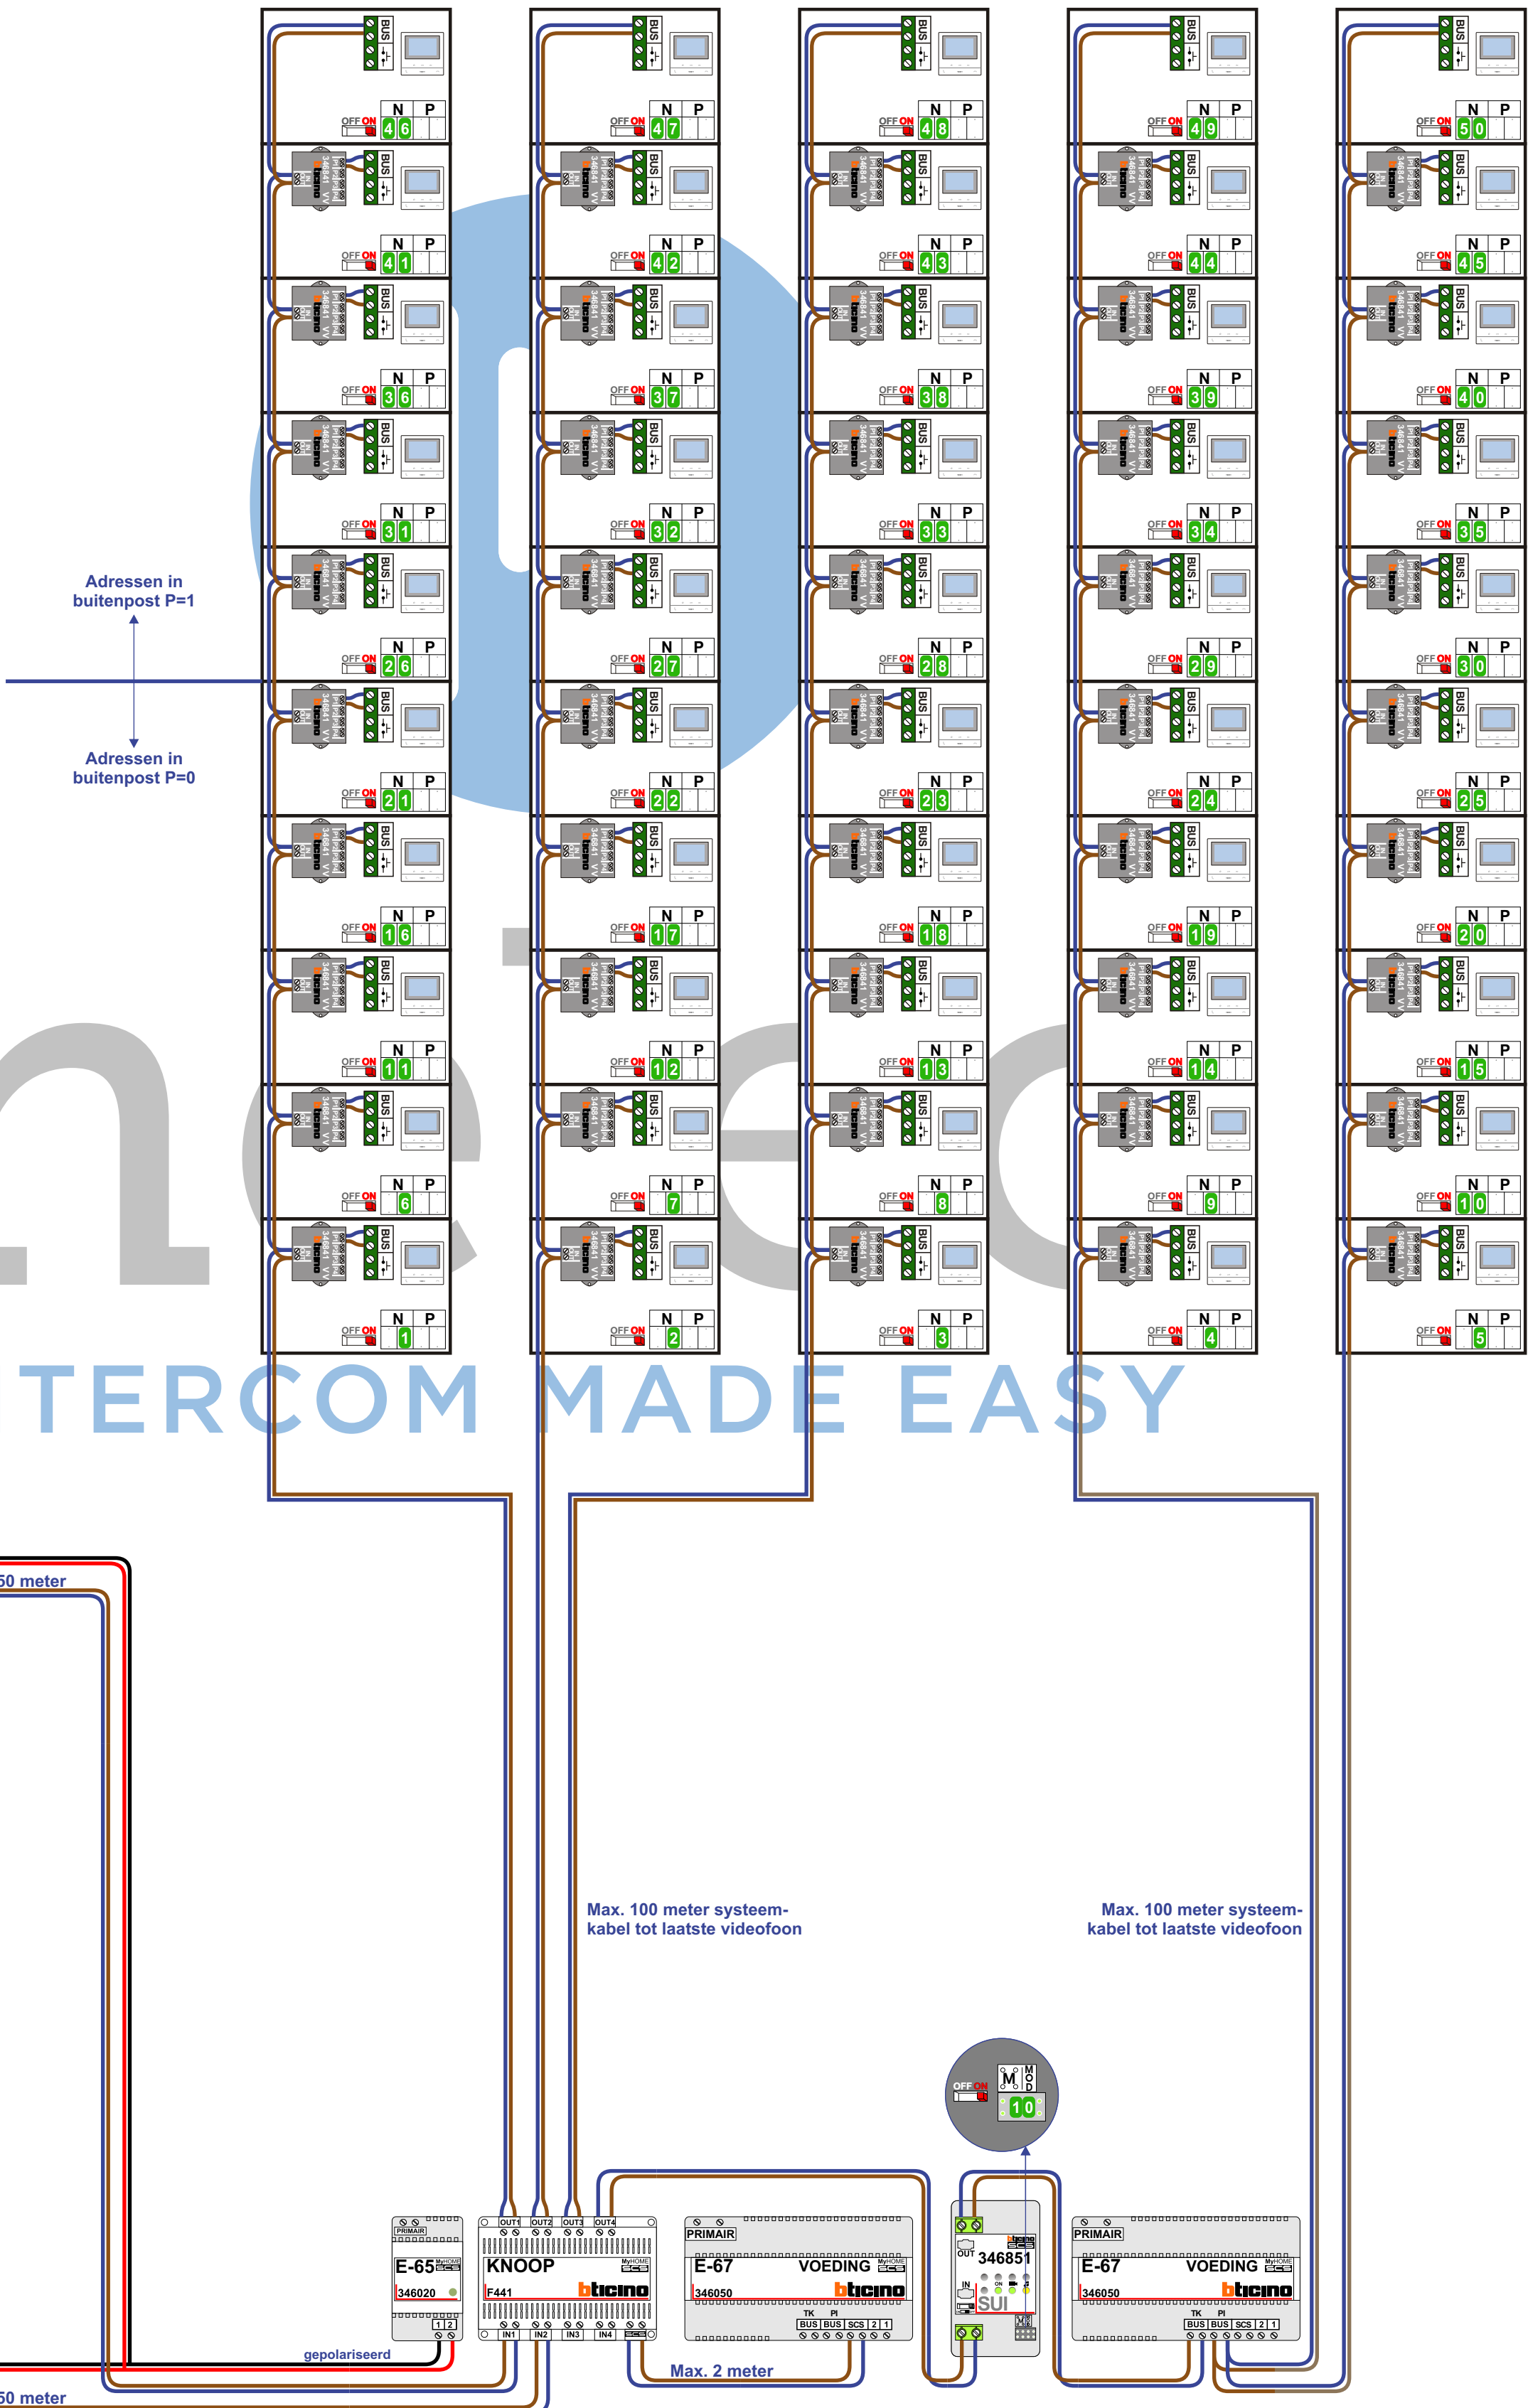

Haal de spanning van het systeem als je een digitizer monteert of demonteert

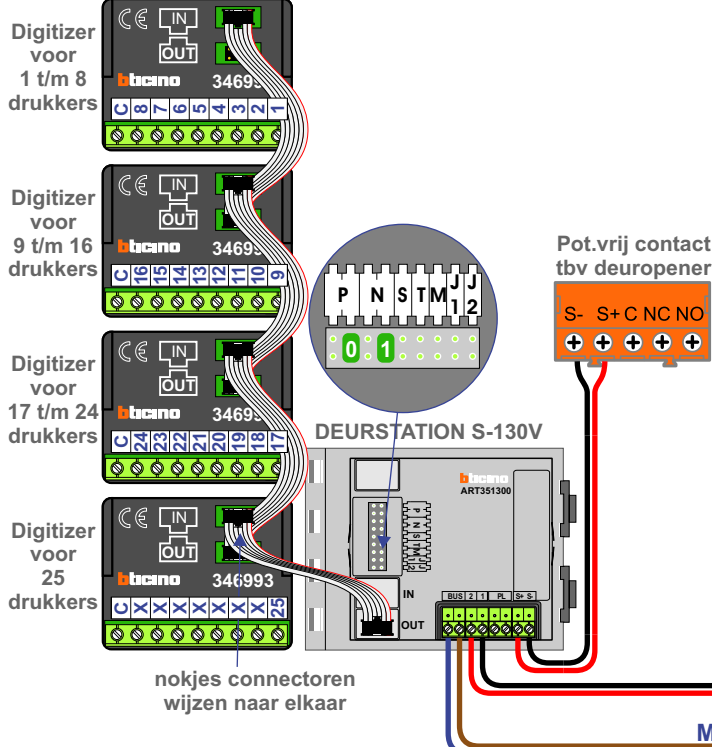

N-Waarde	Huisnummer	Switch-ON
1	243	X
2	245	X
3	247	X
4	249	X
5	251	X
6	253	X
7	255	X
8	257	X
9	259	X
10	261	X
11	263	X
12	265	X
13	267	X
14	269	X
15	271	X
16	273	X
17	275	X
18	277	X
19	279	X
20	281	X
21	283	X
22	285	X
23	287	X
24	289	X
25	291	X
26	293	X
27	295	X
28	297	X
29	299	X
30	301	X
31	303	X
32	305	X
33	307	X
34	309	X
35	311	X
36	313	X
37	315	X
38	317	X
39	319	X
40	321	X
41	323	X
42	325	X
43	327	X
44	329	X
45	331	X
46	333	X
47	335	X
48	337	X
49	339	X
50	341	X