





Haal de spanning van het systeem als je een digitizer monteert of demonteert

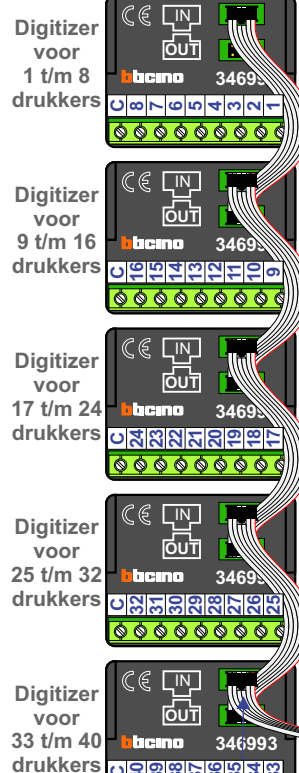

nokjes connectoren wijzen naar elkaar

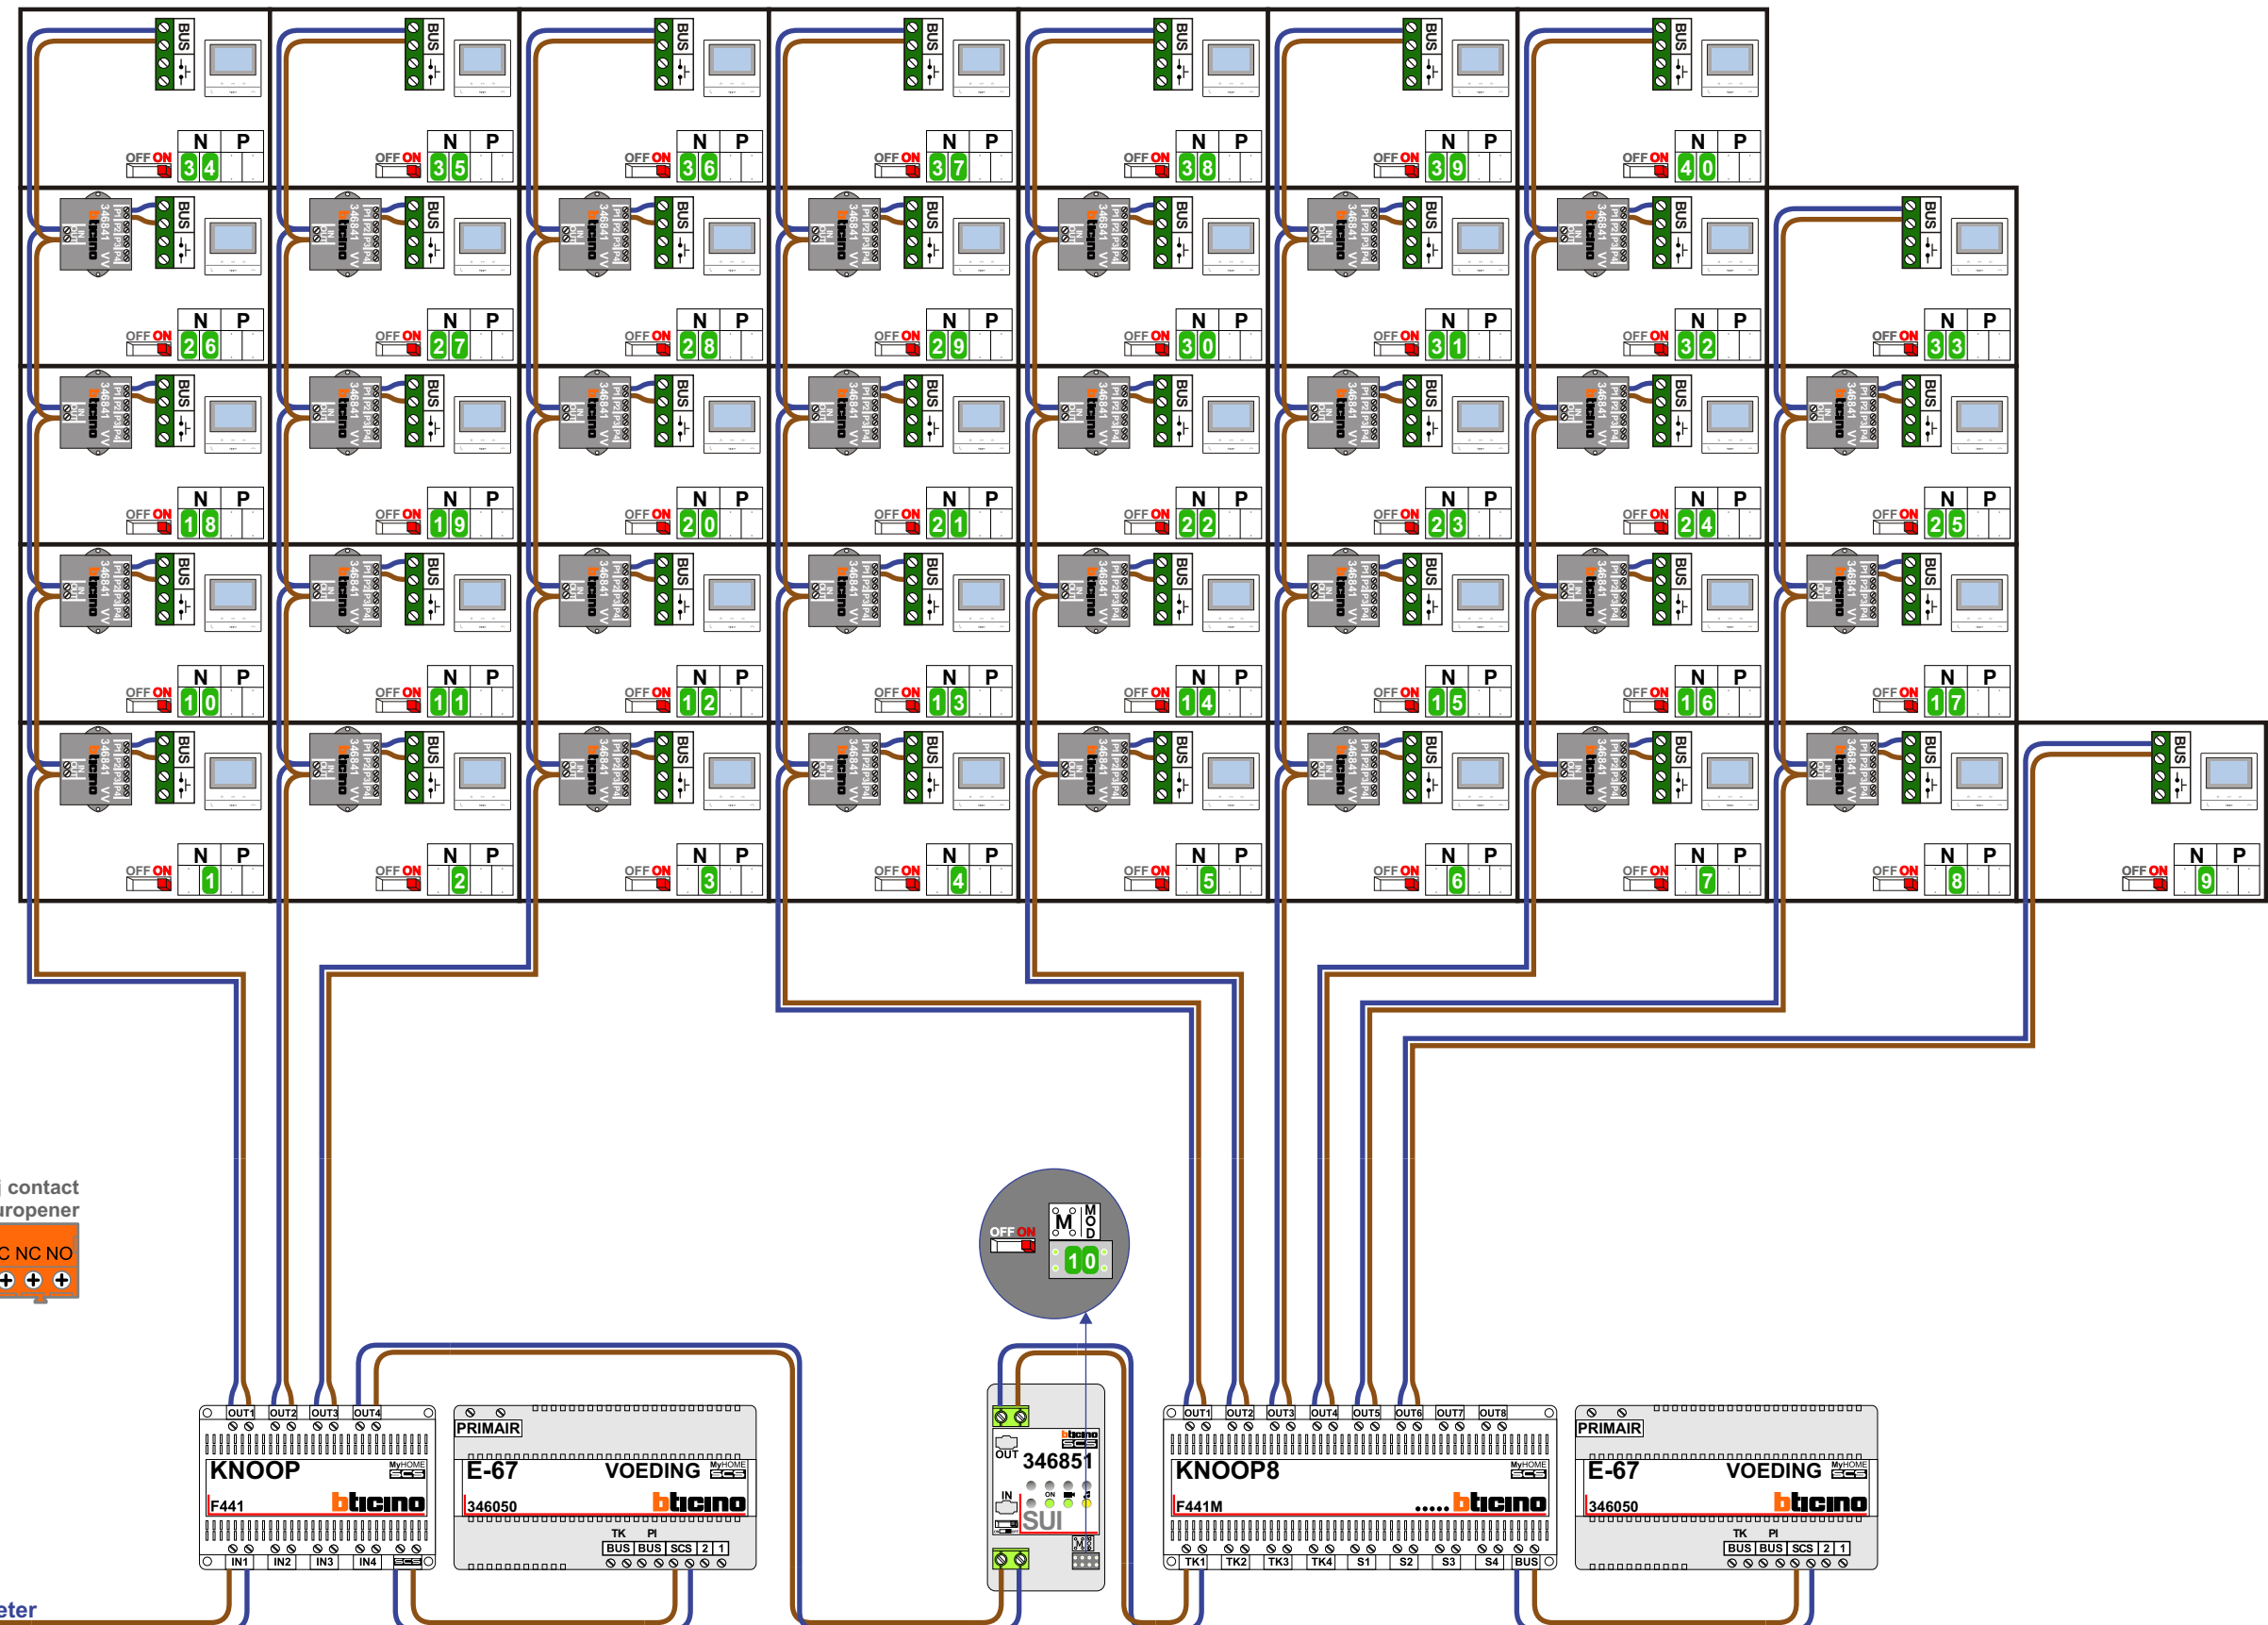

N-waarde	Huisnummer	Eindweerstand
1	1A	X
2	1B	X
3	1C	X
4	1D	X
5	1E	X
6	1F	X
7	1G	X
8	1H	X
9	1J	X
10	3A	X
11	3B	X
12	3C	X
13	3D	X
14	3E	X
15	3F	X
16	3G	X
17	3H	X
18	5A	X
19	5B	X
20	5C	X
21	5D	X
22	5E	X
23	5F	X
24	5G	X
25	5H	X
26	7A	X
27	7B	X
28	7C	X
29	7D	X
30	7E	X
31	7F	X
32	7G	X
33	7H	X
34	9A	X
35	9B	X
36	9C	X
37	9D	X
38	9E	X
39	9F	X
40	9G	X