



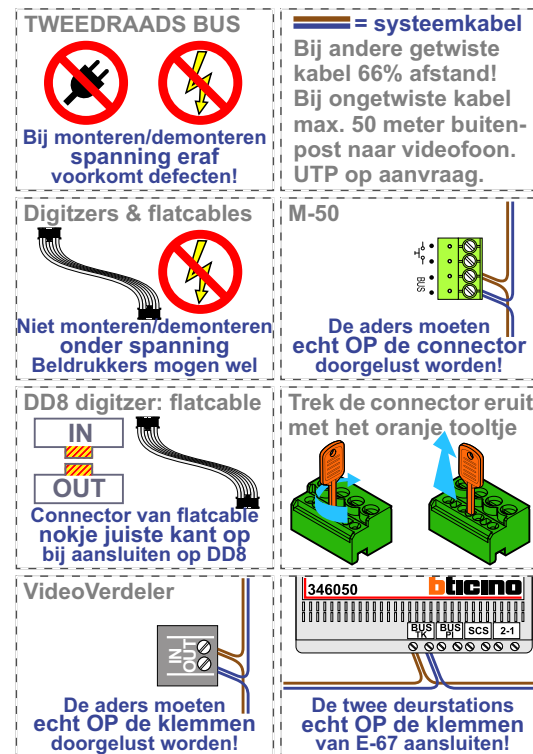
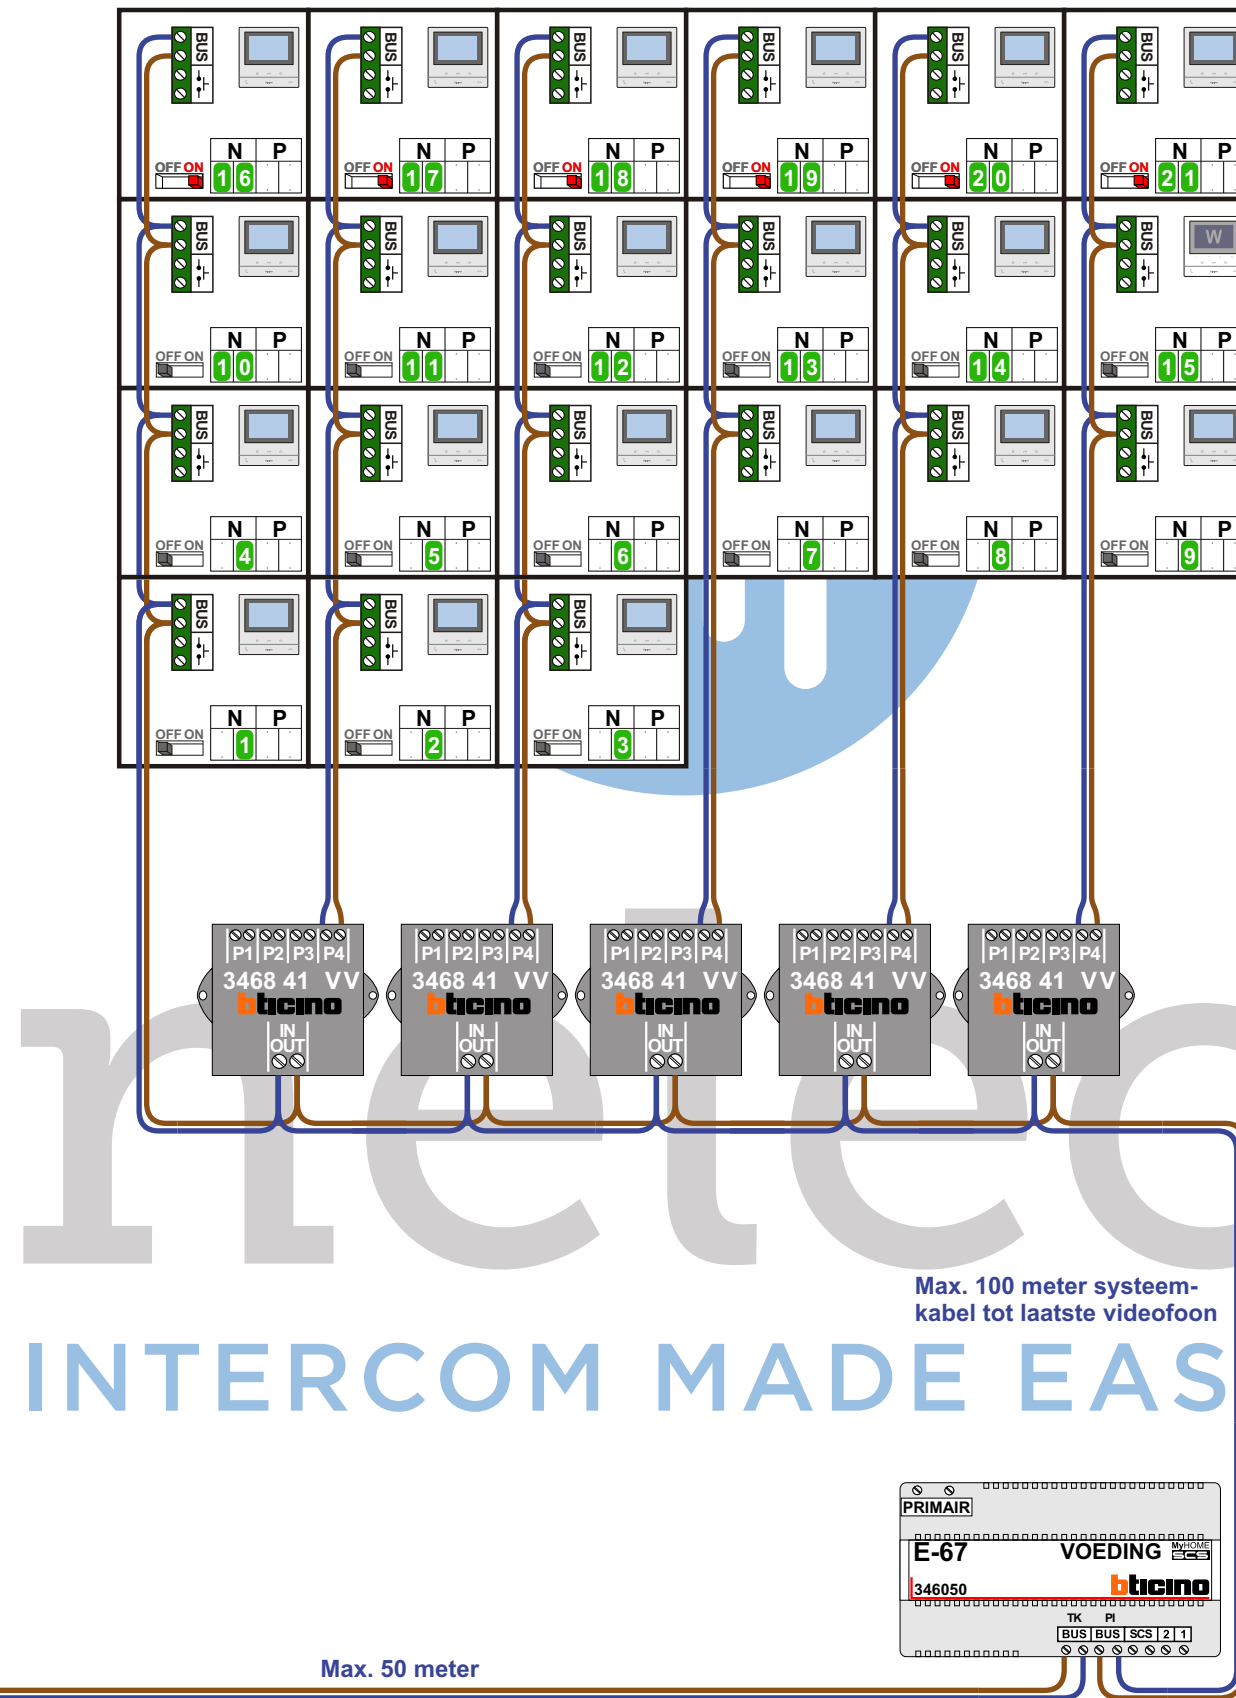


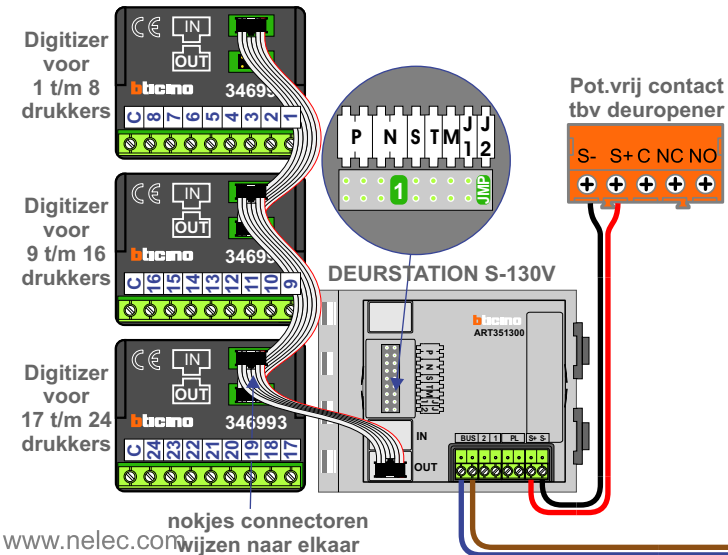

Haal de spanning van het systeem als je een digitizer monteert of demonteert

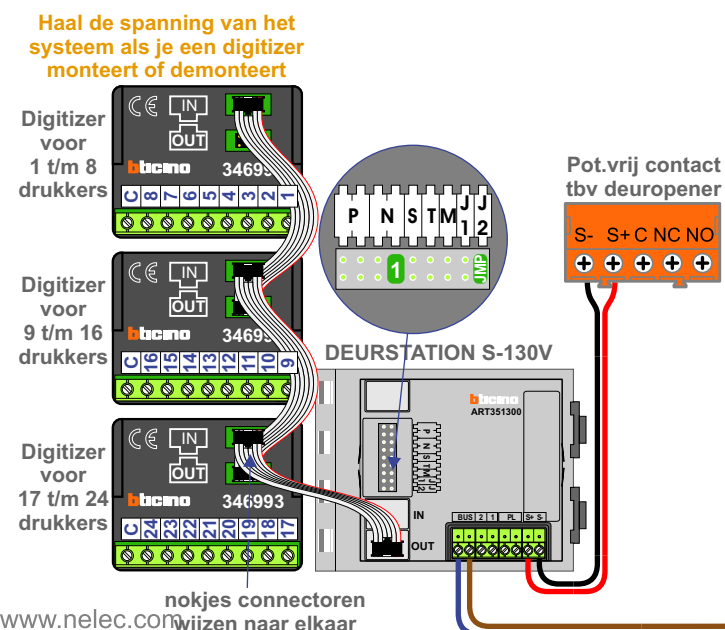

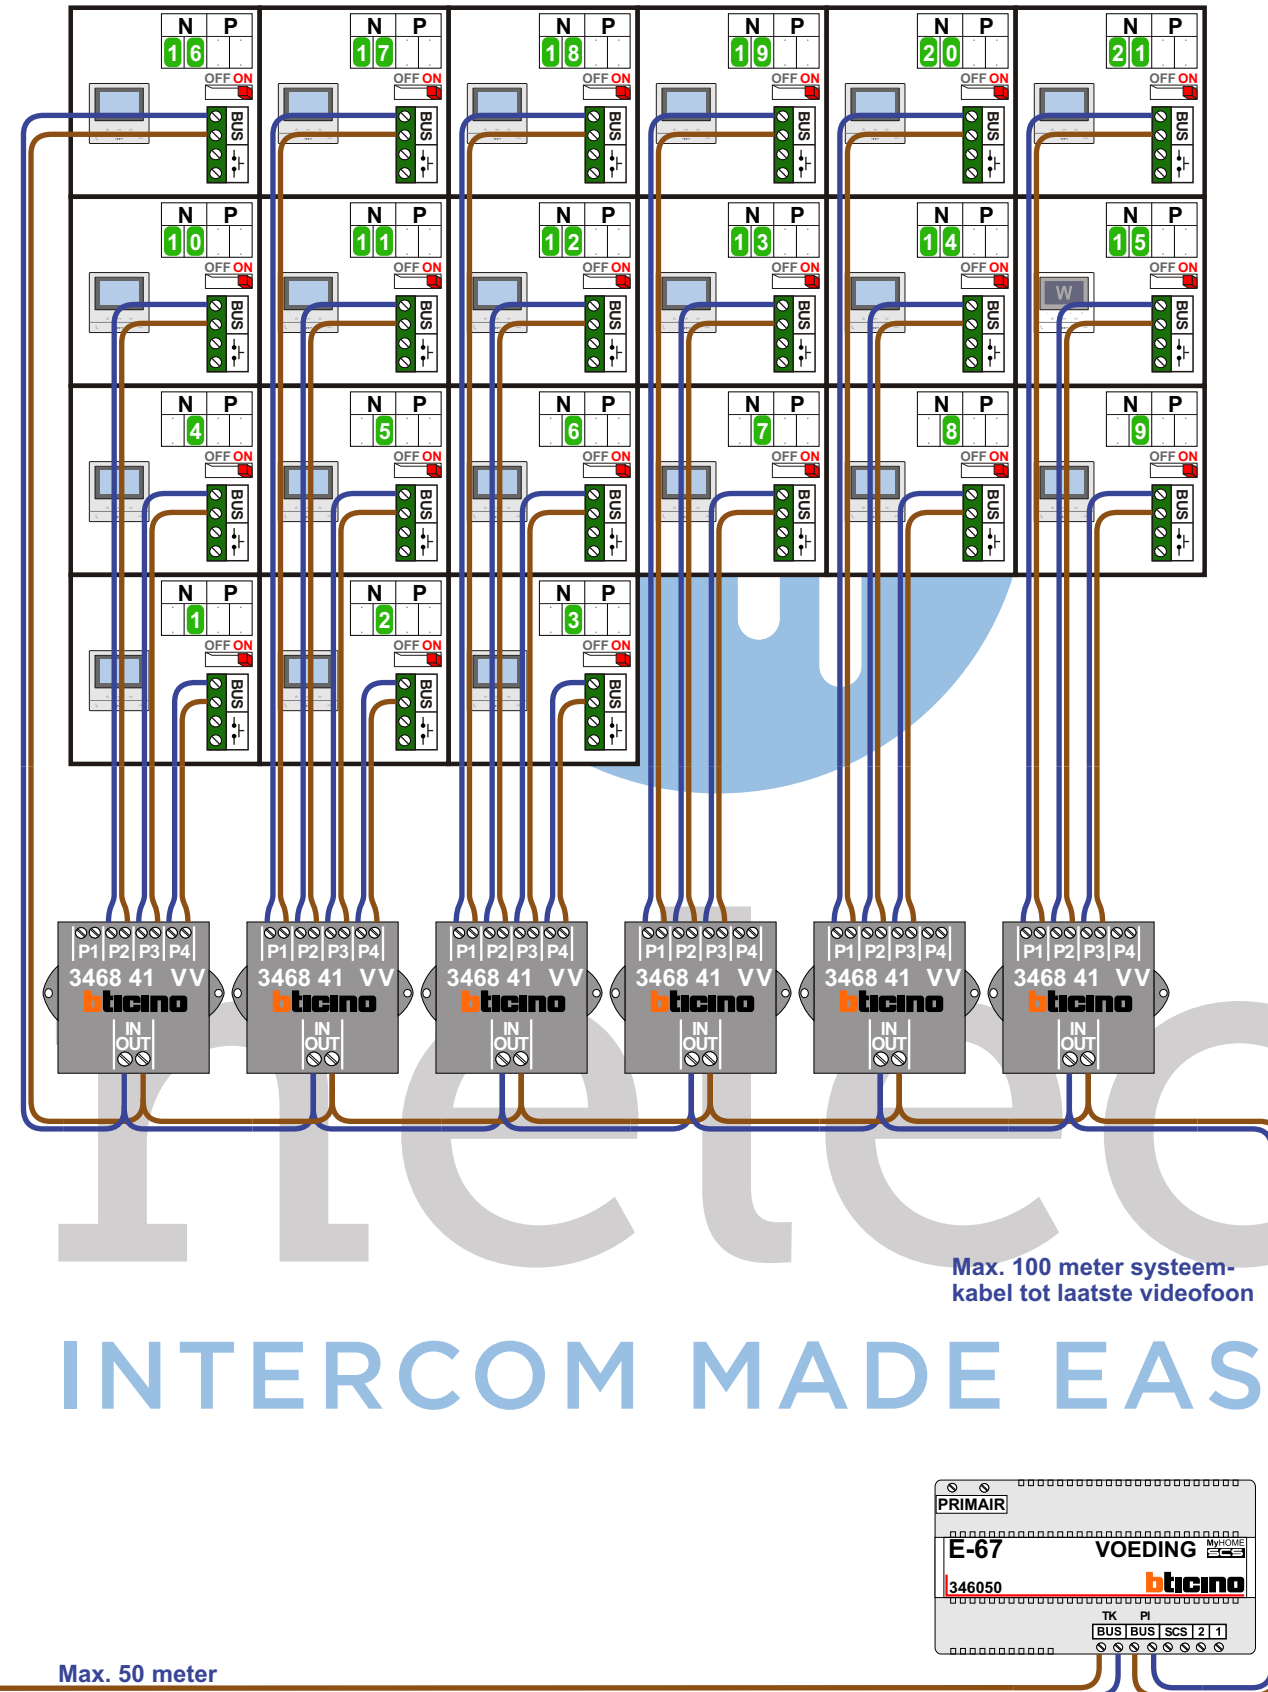

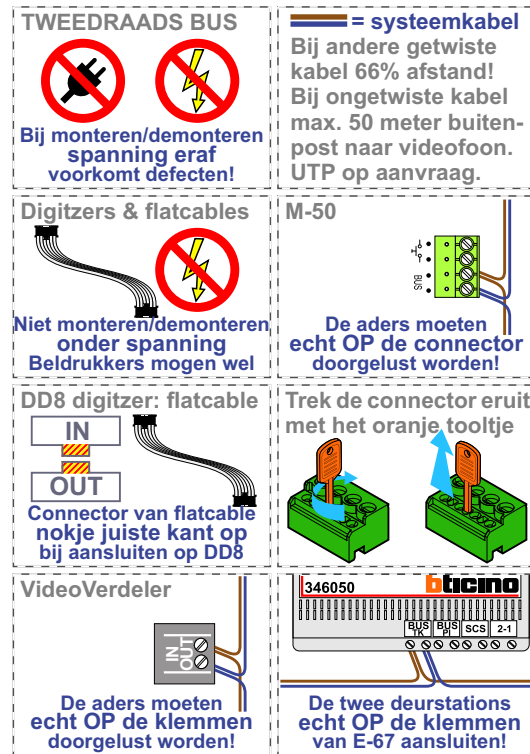

N-Waarde	Huisnummer	Eindweerstand
1	99	
2	101	
3	103	
4	105	
5	107	
6	109	
7	111	
8	113	
9	115	
10	117	
11	119	
12	121	
13	123	
14	125	
15	127	
16	129	X
17	131	X
18	133	X
19	135	X
20	137	X
21	139	X

nelec

INTERCOM MADE EASY