

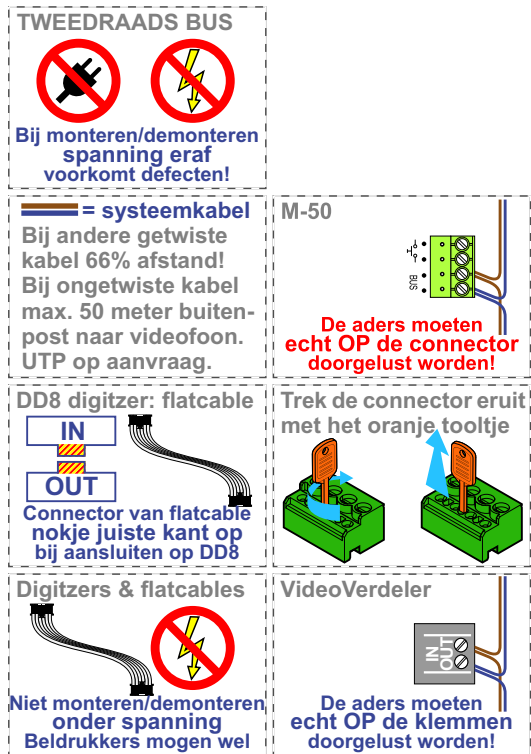
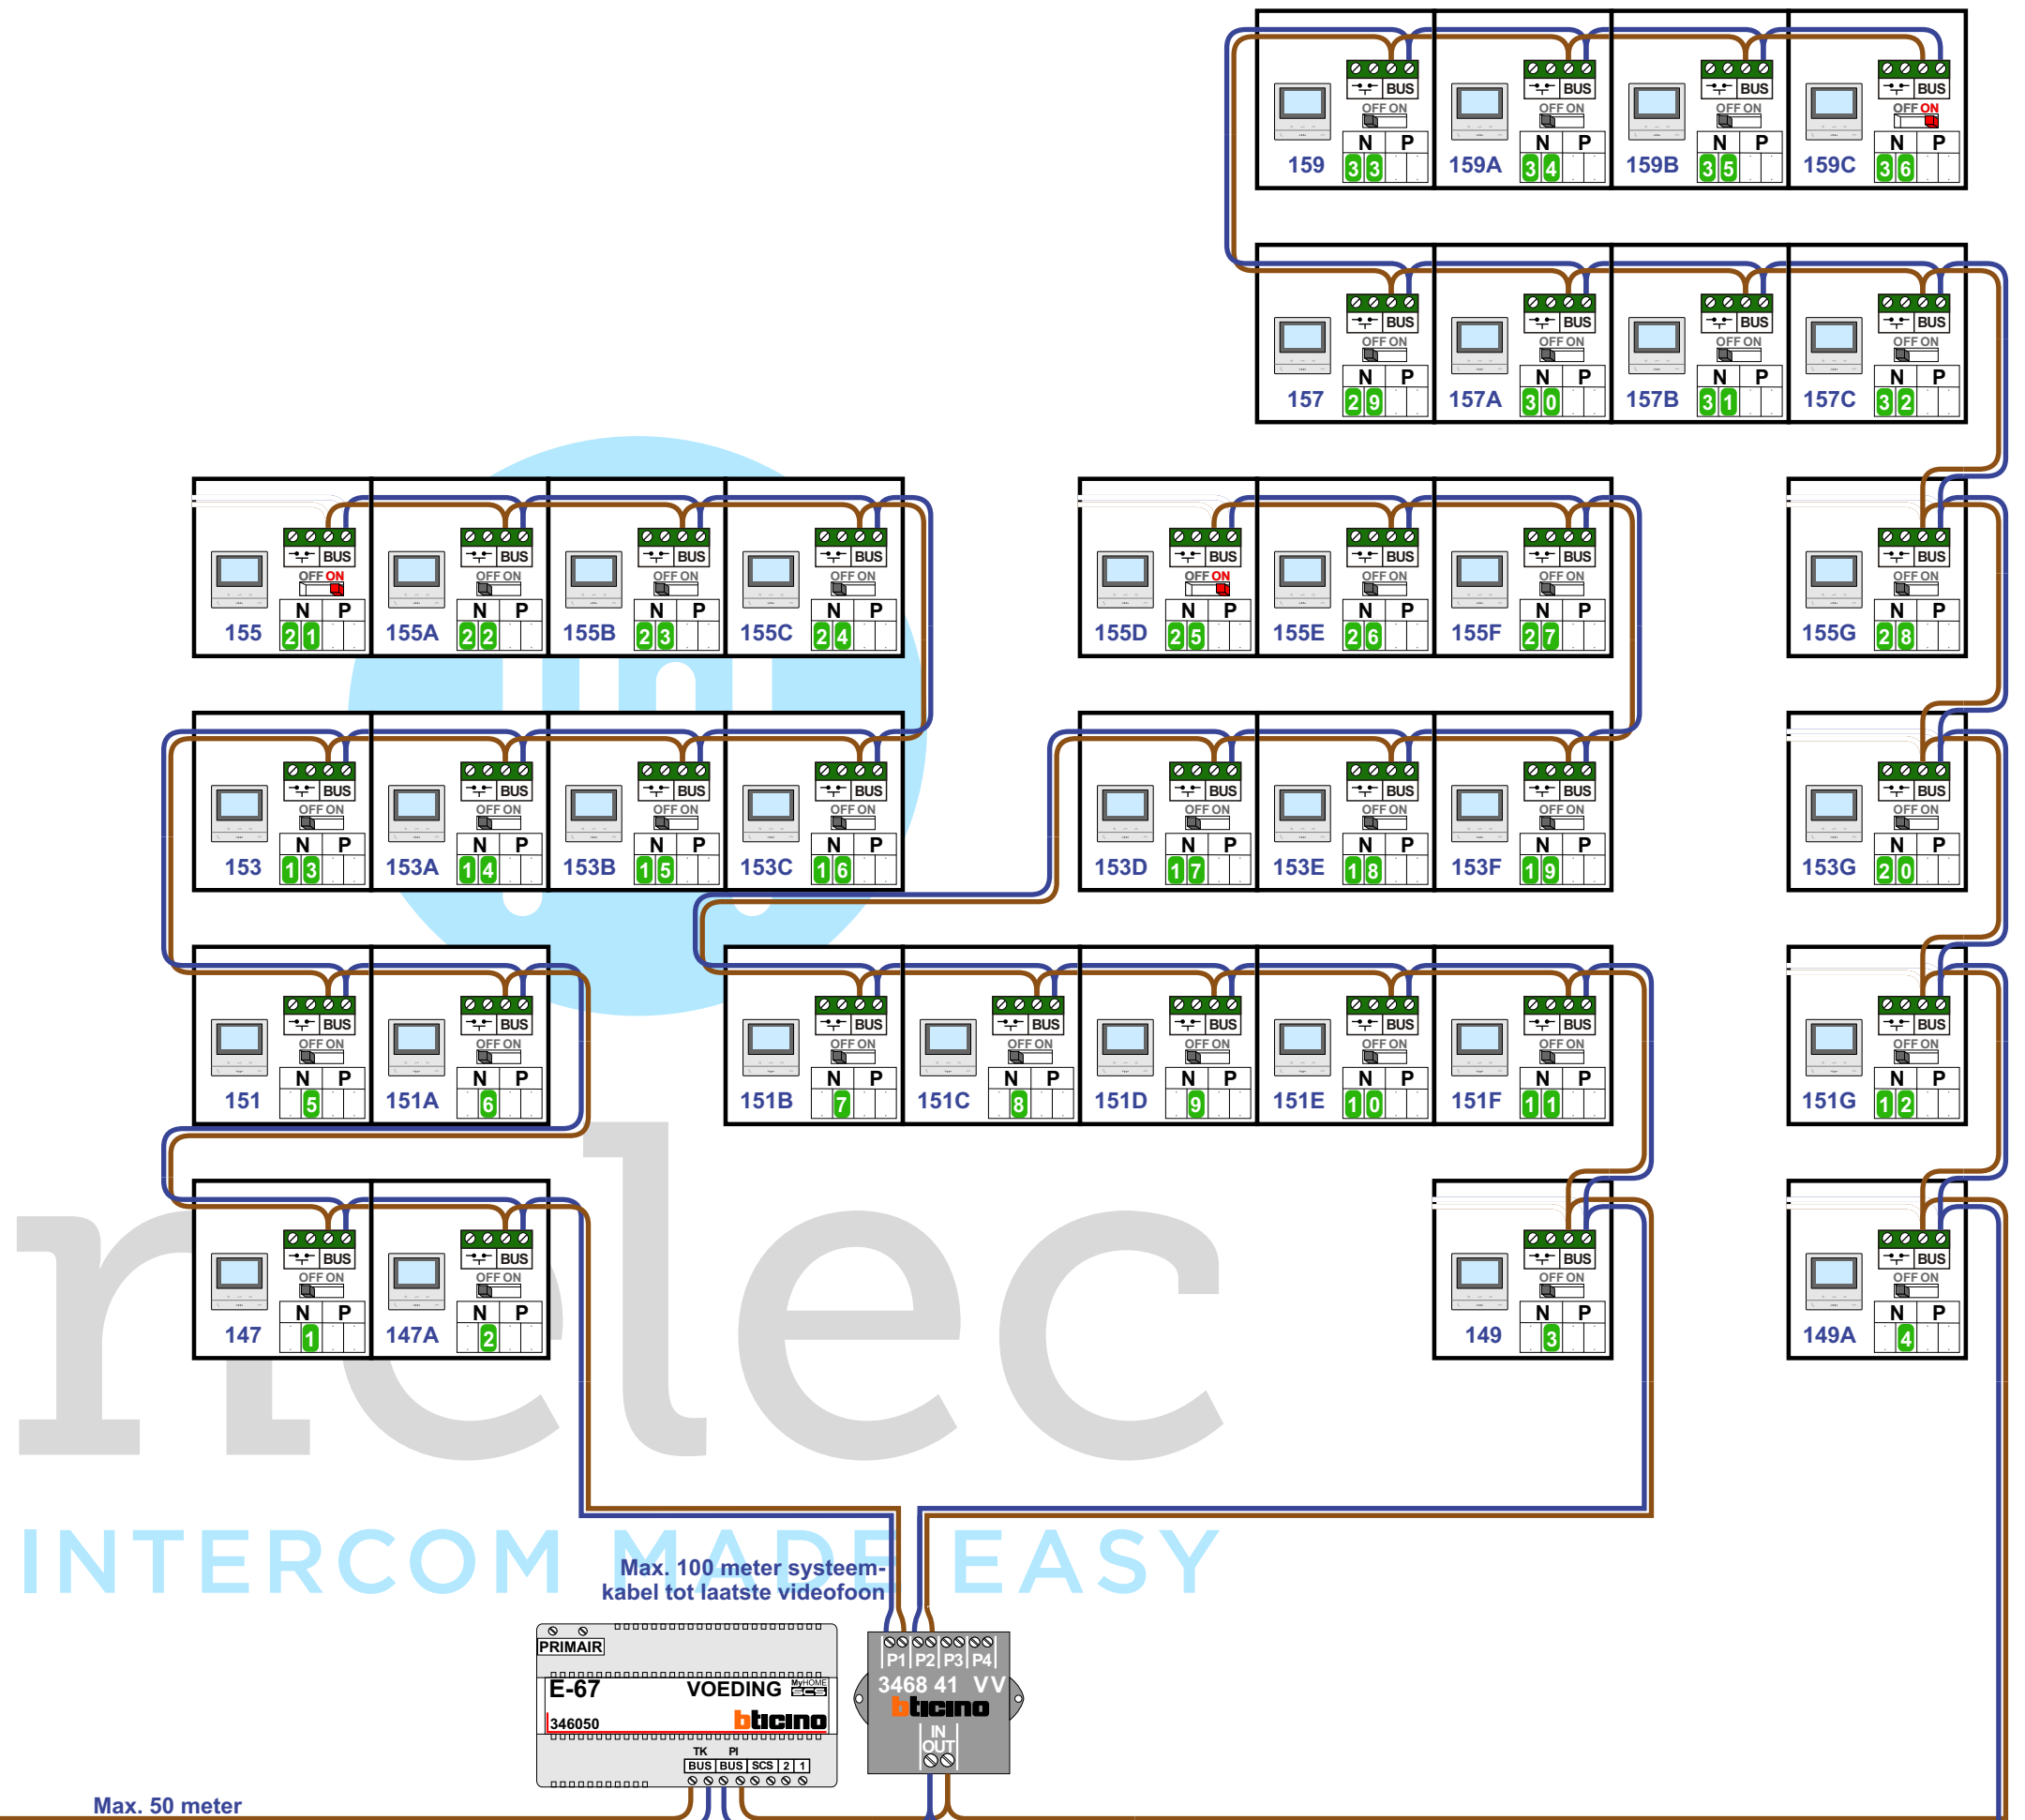


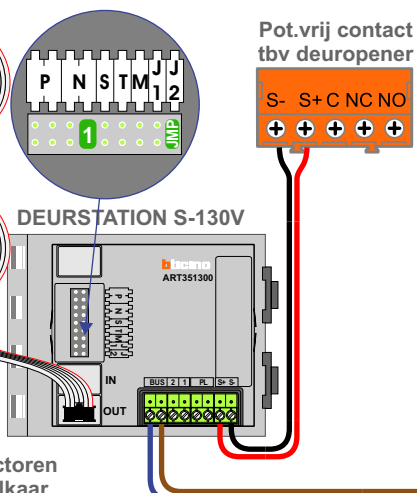

Haal de spanning van het systeem als je een digitizer monteert of demonteert

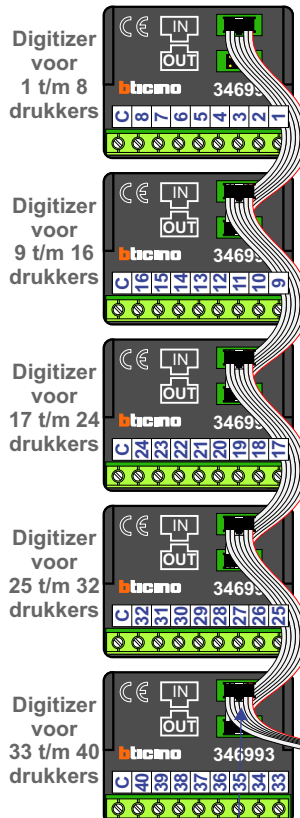

N-Waarde	Huisnummer	Switch-ON
1	147	
2	147A	
3	149	
4	149A	
5	151	
6	151A	
7	151B	
8	151C	
9	151D	
10	151E	
11	151F	
12	151G	
13	153	
14	153A	
15	153B	
16	153C	
17	153D	
18	153E	
19	153F	
20	153G	
21	155	X
22	155A	
23	155B	
24	155C	
25	155D	X
26	155E	
27	155F	
28	155G	
29	157	
30	157A	
31	157B	
32	157C	
33	159	
34	159A	
35	159B	
36	159C	X